



VELARIS ROLL

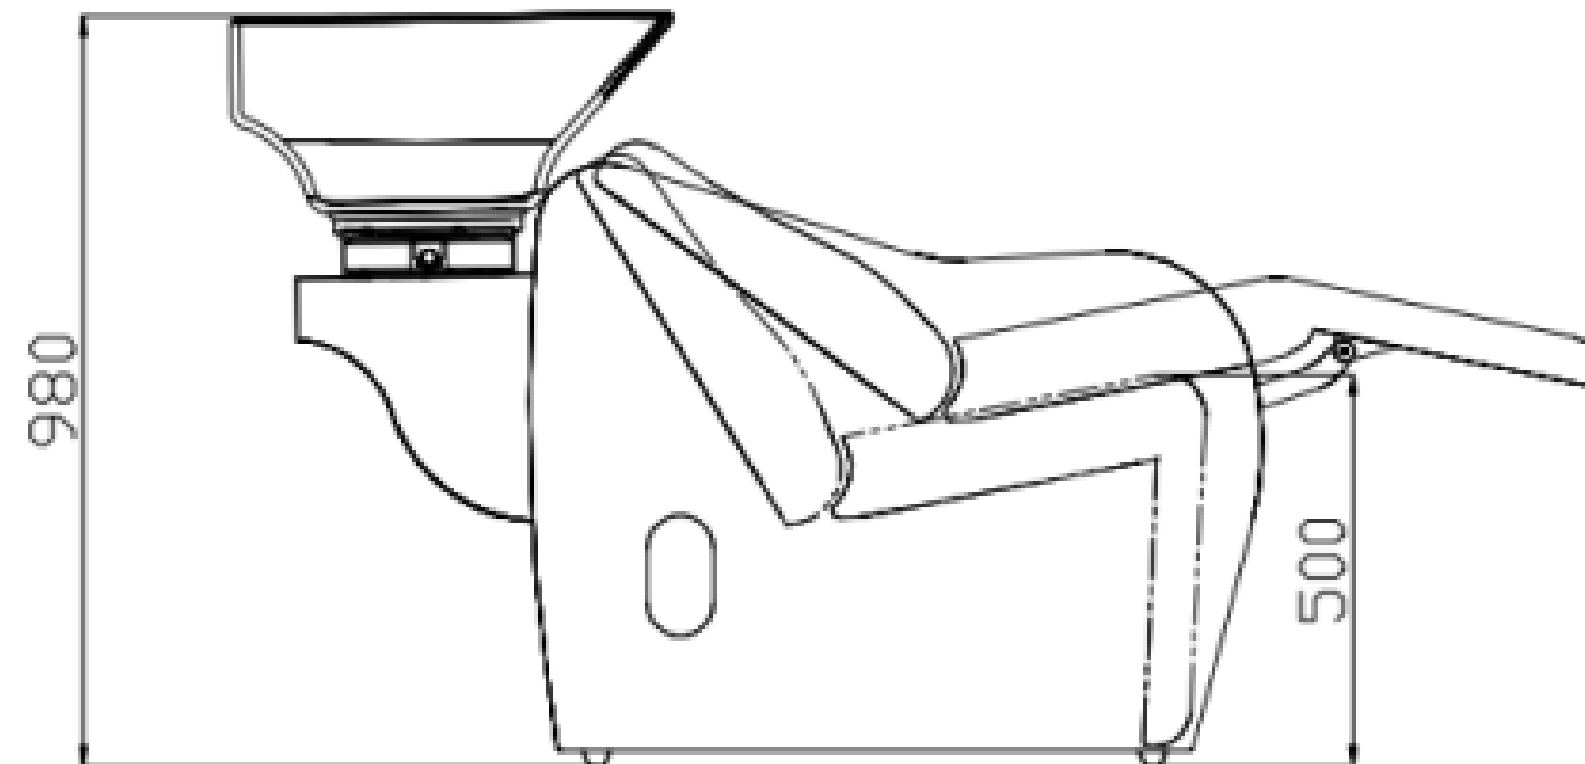


Electrical Specifications

- 70W
- 220V
- 50HZ

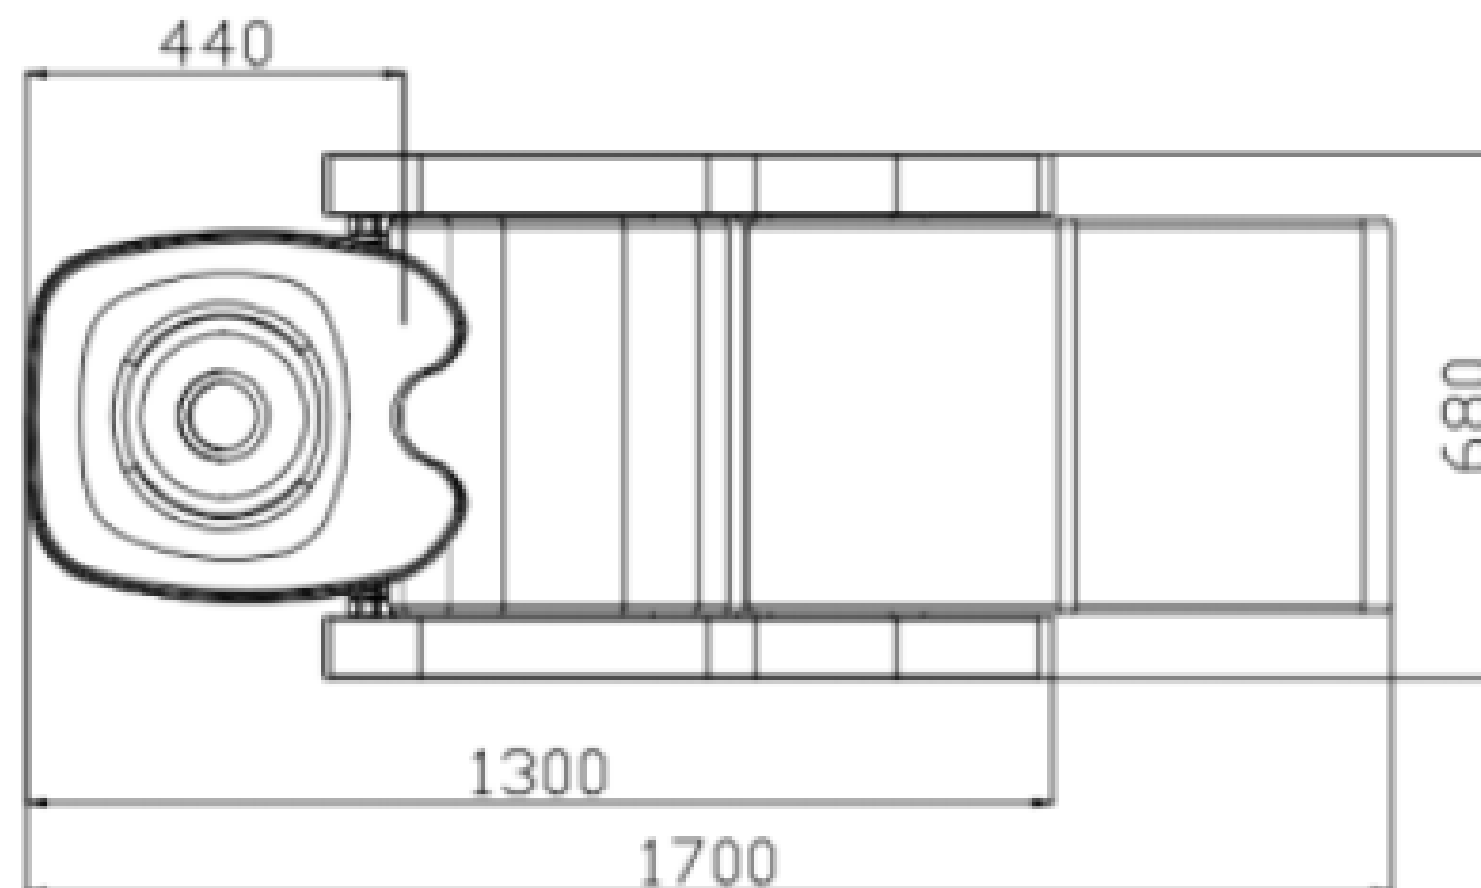

WORKSPACE

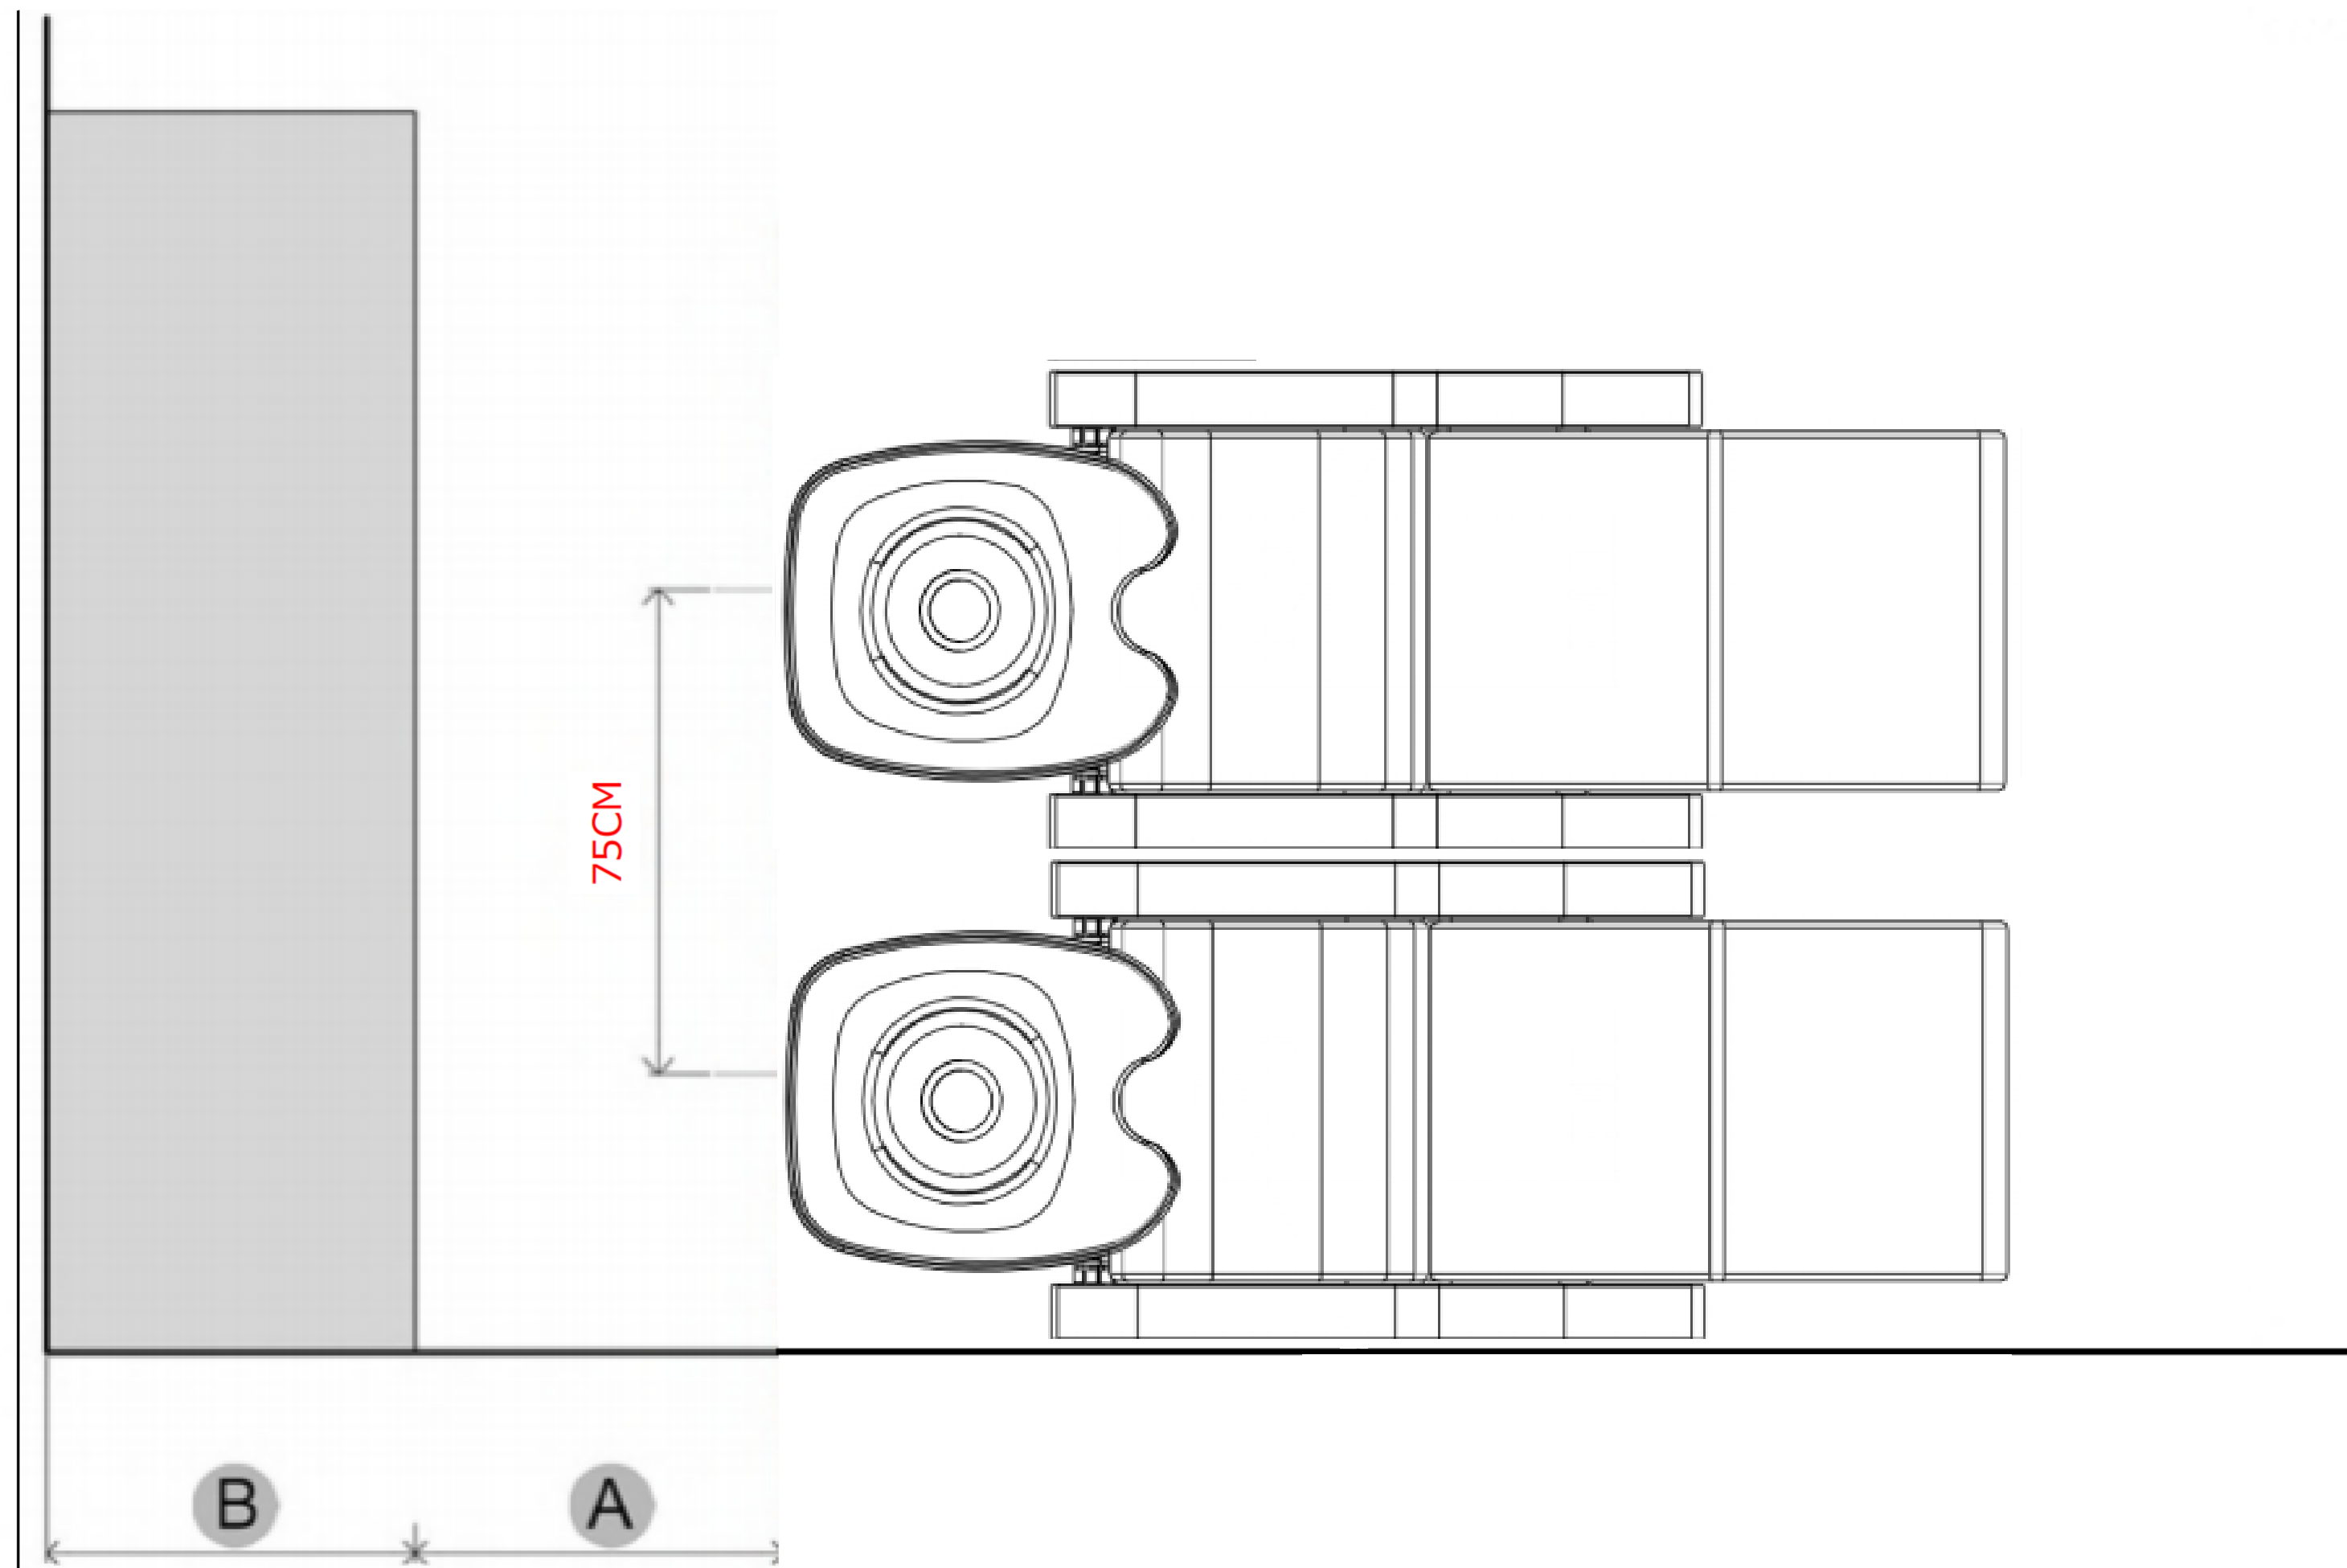


A Variable workspace size (no less than 70 cm)

B Backsplash cabinet - variable size


INSTALLATION

1.Pull out the backrest in the direction of the arrow

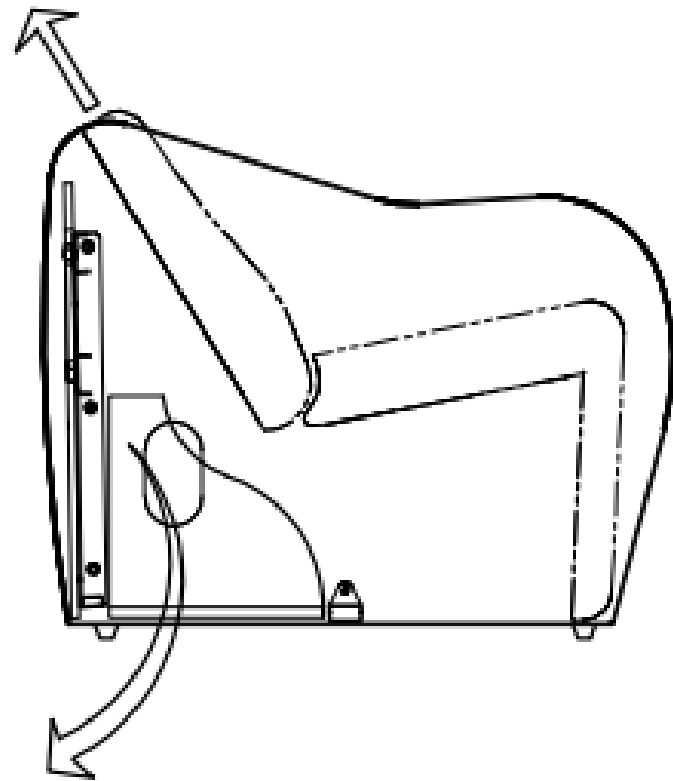

2.Remove the head base


4.Put the head base in right position and use screws secure it

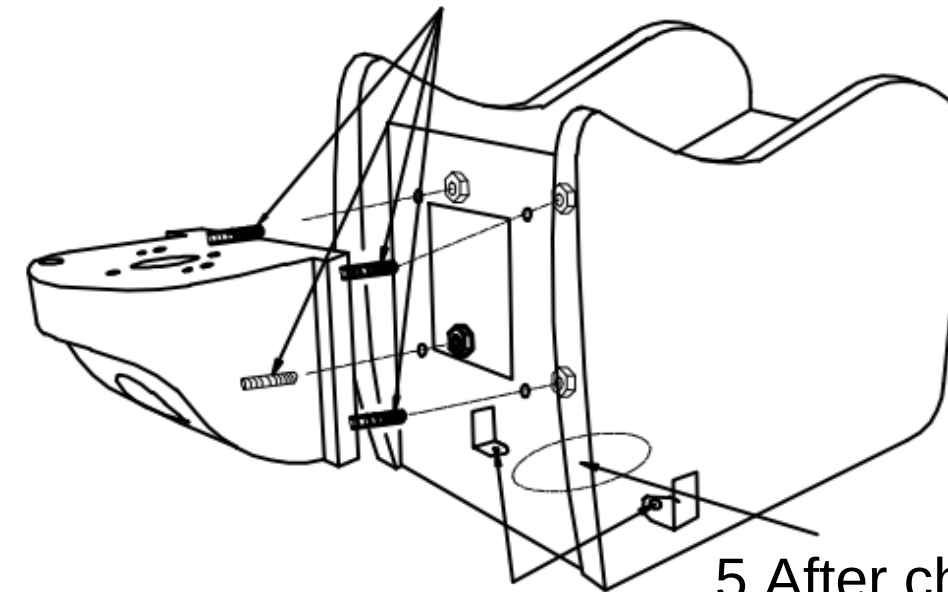

3.Chair frame is secured through these two fixed foot

5.After chair frame is installed, connect the water pipes in this circle

7.Adjusting position by swaying, secure it tightly with the screws at the front and back. Tighten the two nuts on the left and right

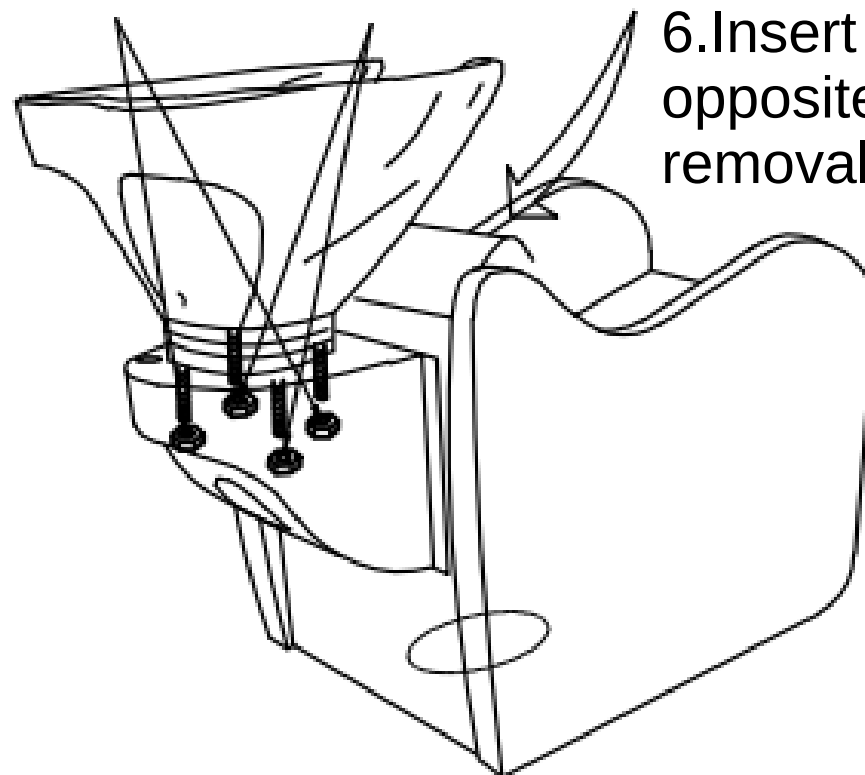


6.Insert the backrest in the opposite direction of the removal direction

Lift switch: Press the up/down button to lift/lower with one touch. During lift/lower, pressing the button again can stop at any position




Massage switch: Press up button to turn on massage in one direction. Press again to turn off the massage. Press down button to turn on massage in the opposite direction. Press again to turn off.

3 FRAME FIXATION

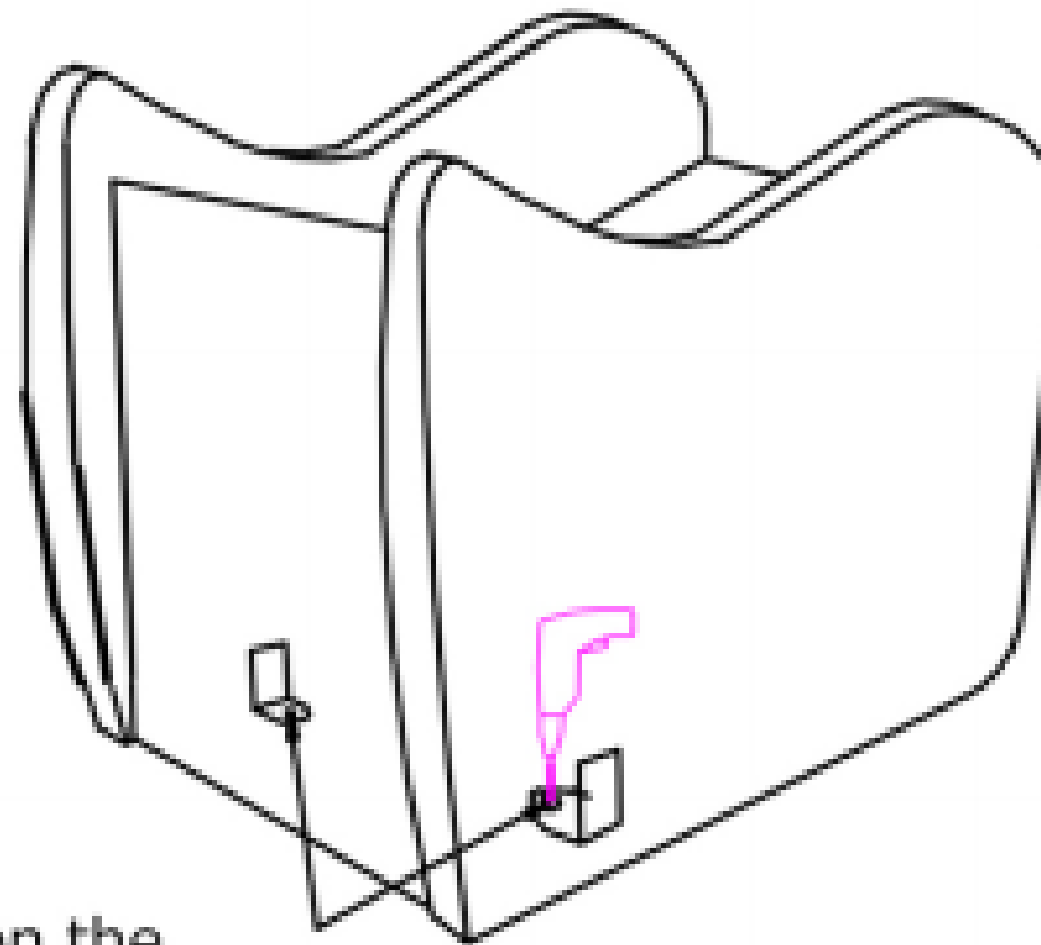

a: Mark the points on the floor for anchoring.

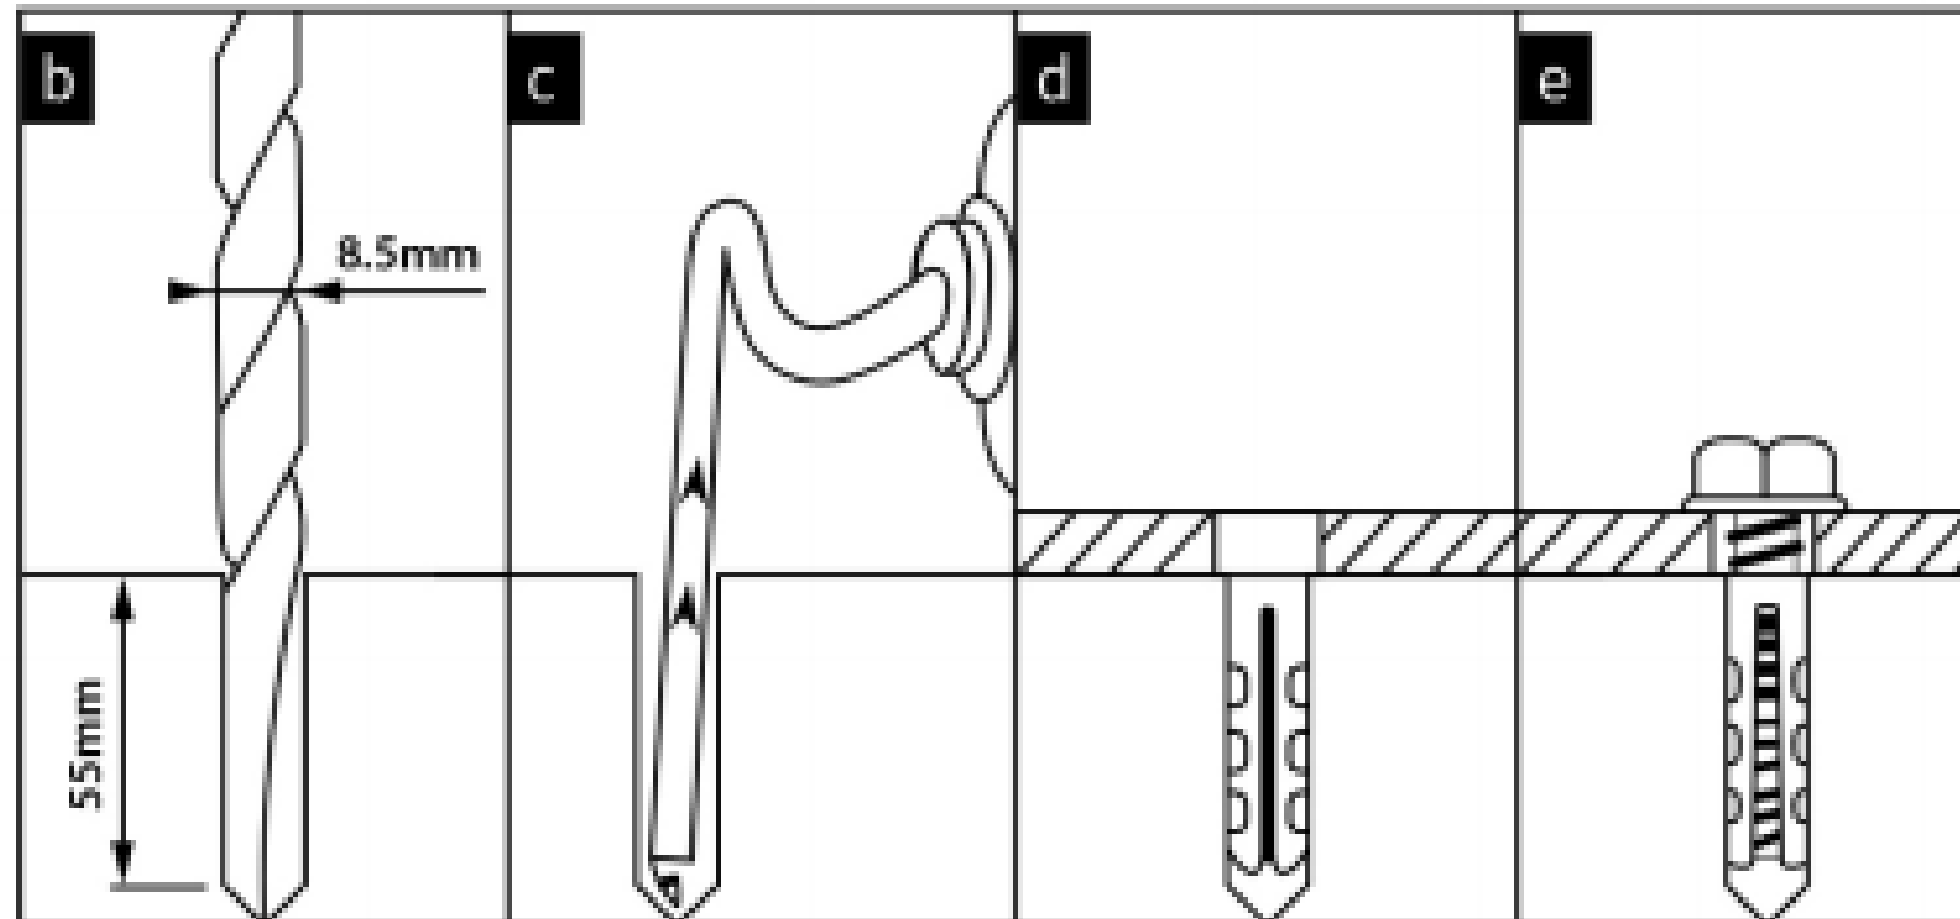


b: Drill with an 8.5 mm bit to a depth of 55 mm.

c: Remove the debris from the hole.



d: Insert the anchoring plug in the hole.

e: Screw the washing unit to the floor with the attached screws.

5 WATER/ELECTRICITY INSTALLATION

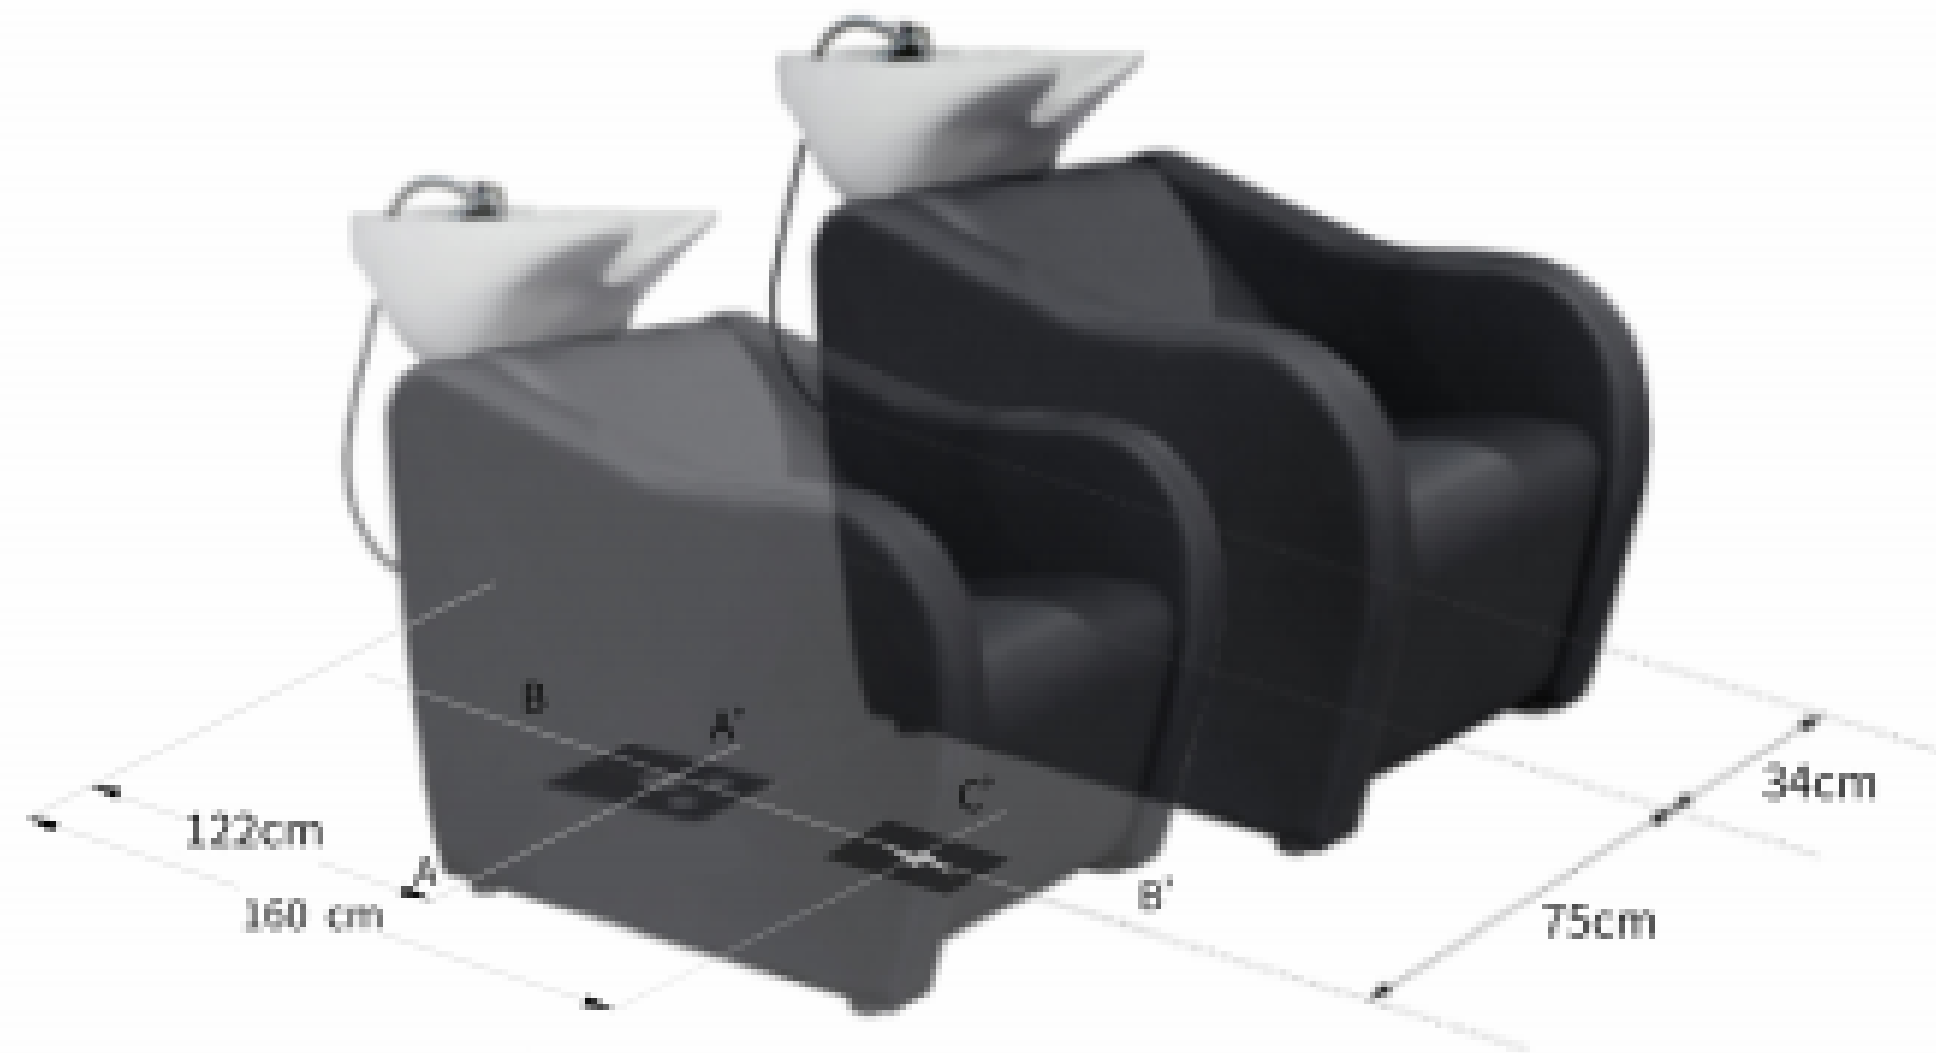


1. Drain $\varnothing$ 40mm
2. Cold $3/8''$
3. Hot $3/8''$

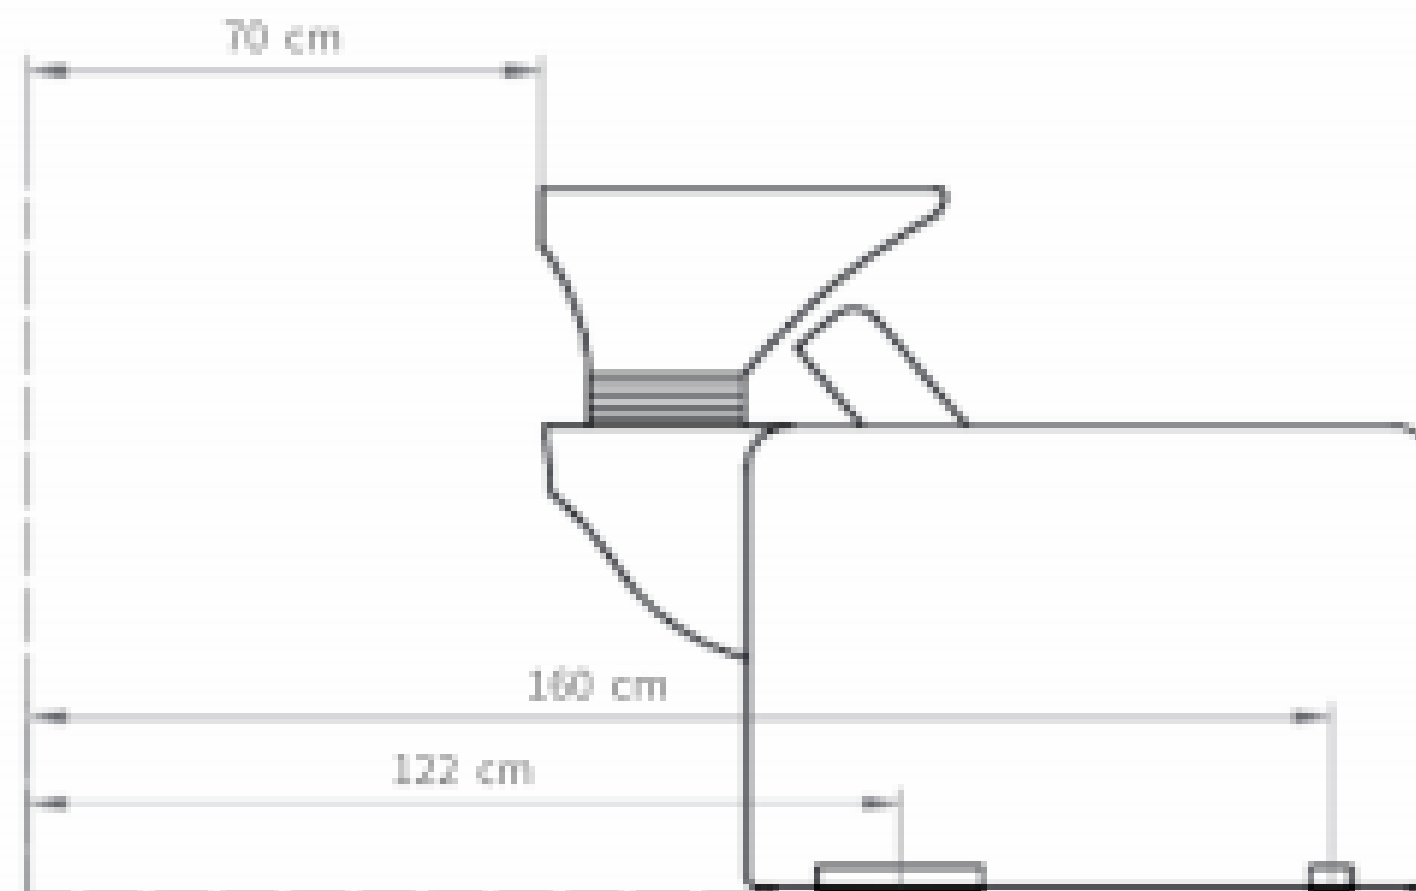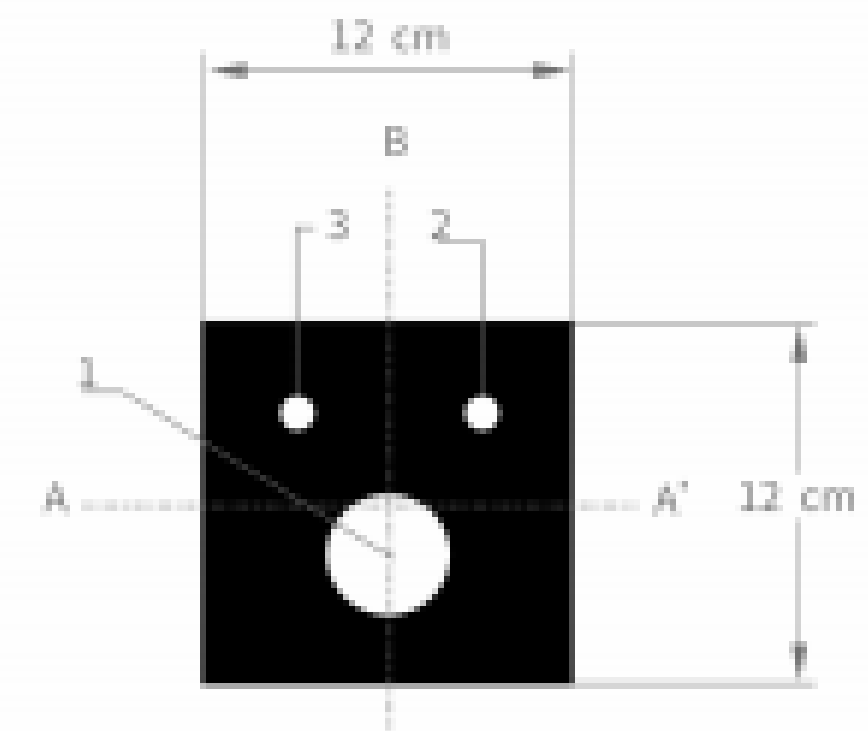

7 TILTING SYSTEM




Bolts for fixing the ceramic basin

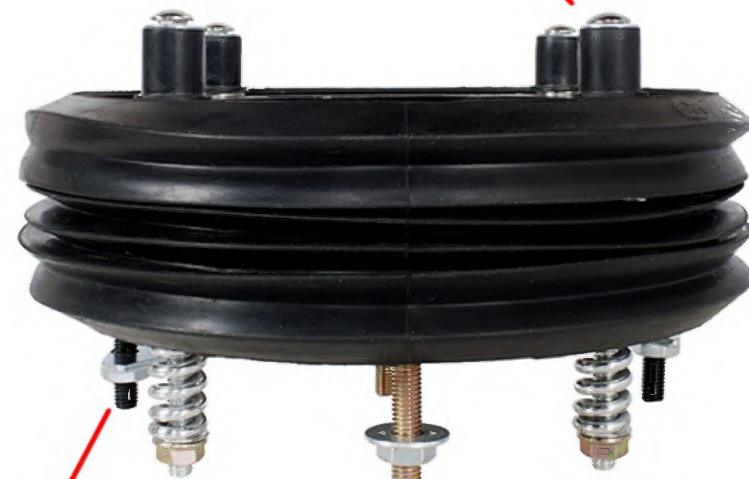

Bolts for fixing
basin to base

Bolts for limiting
the tilt angle


Bolts for adjusting
the tilt resistance

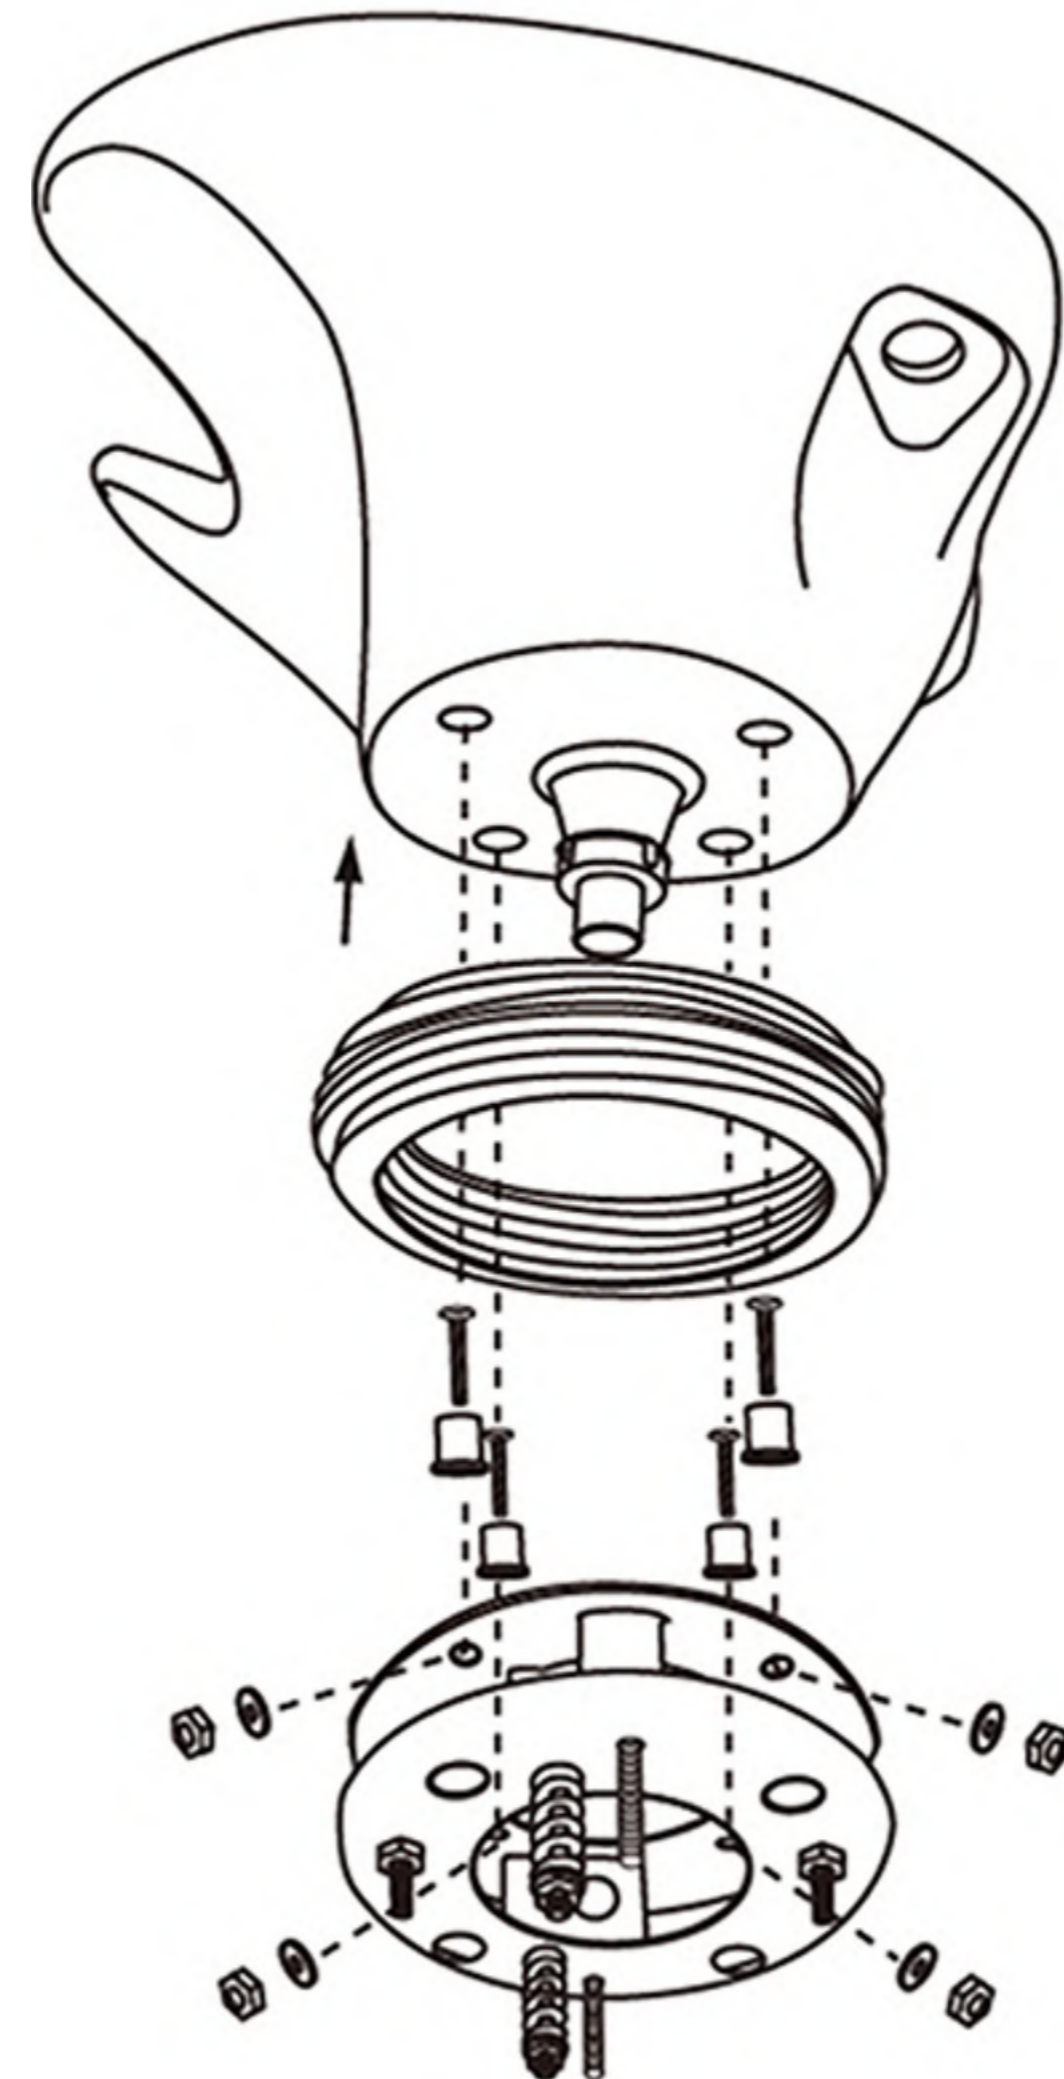


NB: The drain must be installed before installing the tilting system

7 TILTING SYSTEM

Adjust the screws and bolts according to the following pictures to either limit or not limit the tilt angle of the ceramic basin.

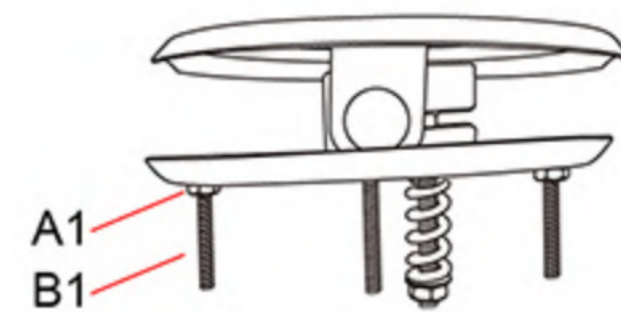


Loosen the nut A1

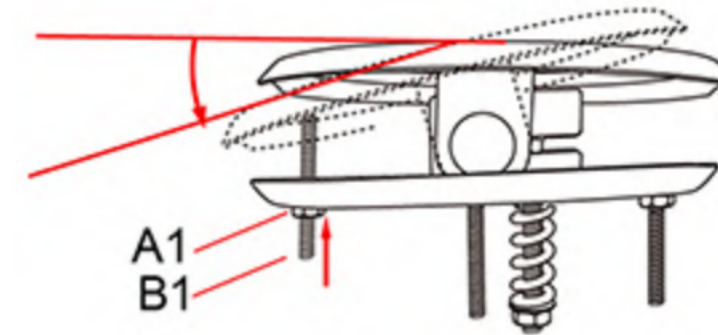


Tighten the B1 screw upwards and tighten the A1 nut




Adjust the tilt angle of ceramic basin downwards

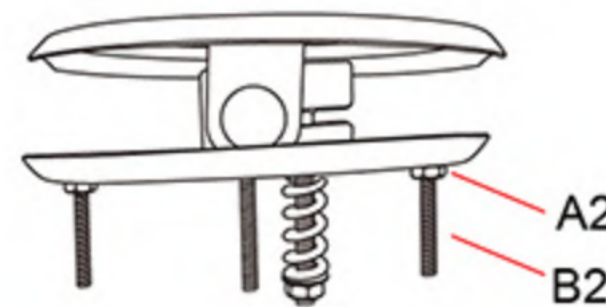

Loosen the nut A2

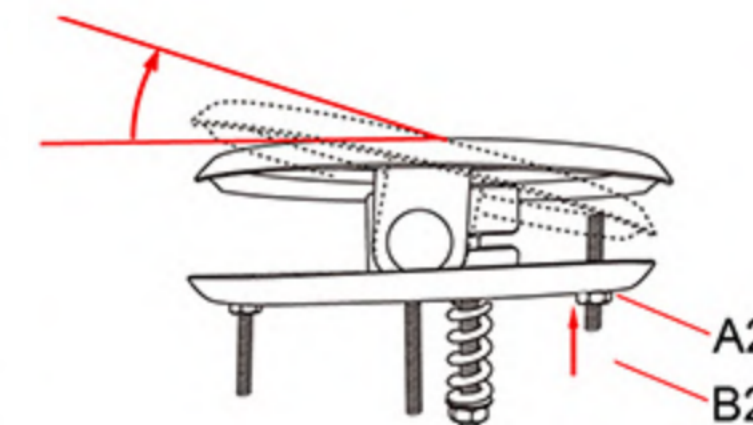


Tighten the B2 screw upwards and tighten the A2 nut

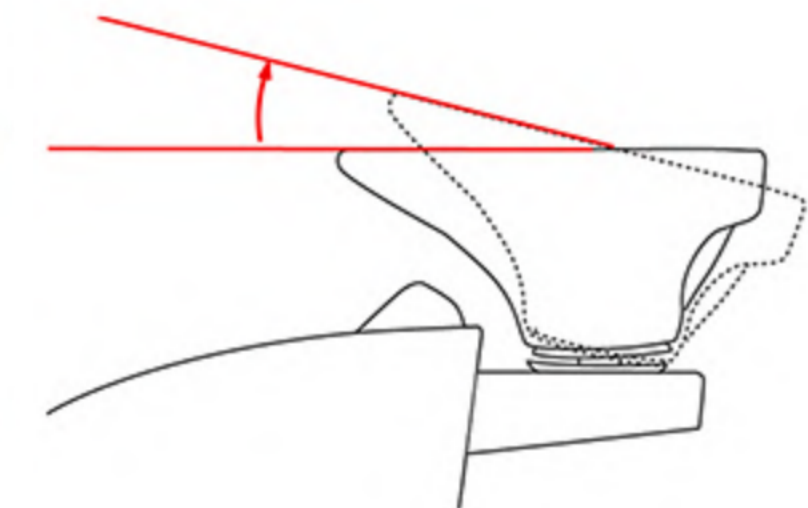


Adjust the tilt angle of ceramic basin upwards

Tighten or loosen the C1 and C2 bolts in the same way to control the tilt degree of the ceramic basin.

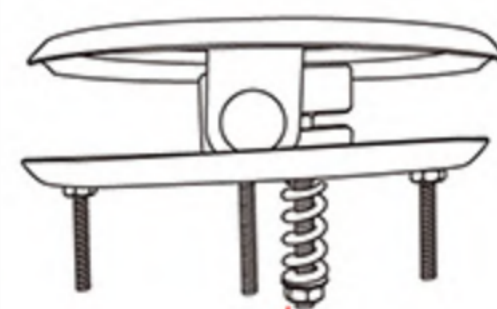

C1,C2

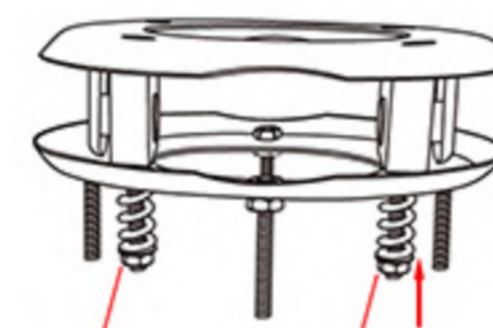

C1

C2

