

Instructions for Belmont Chair

1/ Unpack all the items and remove the protective wrapping.

2/ Insert the hydraulic pump into the base, place on an angle and put a flat washer, spring washer and a nut on each thread and tighten using a 10mm spanner or socket



3/ Put the plastic cover over the pump and inset the screw into the top.

Place the foot pump lever into the shaft on either side of the hydraulic and tighten the grub screws to hold it in place.



4/ Lay the top of the hydraulic on a firm surface and tap the locator pin into the top of the hydraulic.




5/ Sit the chair onto the base and line the locator pin up with the slot in the bracket under the chair.



6/ Remove the screws from the chair back and the one on bracket. Sit the back in place and reinsert the screws remembering the bracket. Start all the screws before tightening fully, make sure the back is straight and centered and fully tighten.



7/ Remove the screws from the underside of the front of the chair, put the foot rest bracket in place and reinsert the screws. Again leave them slightly loose, make sure the bracket is straight and tighten.

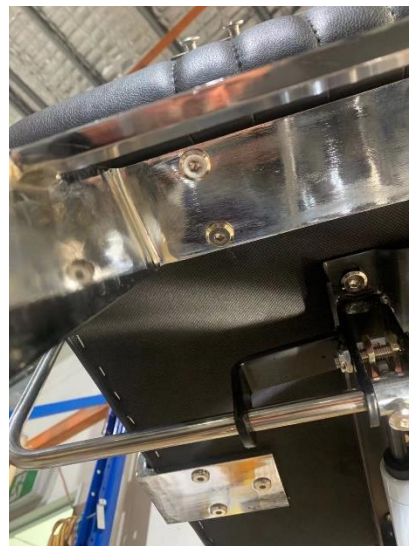

8/ Screw the foot into the bottom of the foot rest.



8/ Remove the screws from the sides of the footrest, sit in place and replace the screws, again start them all first, ensure it is straight and tighten.

